



INSTRUCTIONS

PLEASE READ THESE INSTRUCTIONS BEFORE INSTALLATION.

ELECTRONIC TRANSFORMER LED DRIVER

ALD852

- Installation should be carried according to the AS/NZS 3000 wiring rules, by a qualified electrician.
- Before installation or maintenance, ensure electricity is switched off at the mains.
- This driver is suitable for operation with constant voltage LED lamps and LED modules. Do not use with non LED products.
- Total load/LED lamps connected to driver must NOT EXCEED 36W. Do not over-load the driver.
- Observe correct polarity marked on the driver when wiring.
- Before installation, determine a safe installation position.

PLACE THE DRIVER AT LEAST 50MM AWAY FROM LIGHT SOURCE, ON TOP OF ANY THERMAL INSULATION.

DO NOT COVER DRIVER WITH THERMAL INSULATION.

- This driver is suitable for indoor dry use only.
Avoid contact with moisture and allow adequate ventilation (maximum operating temperature: 40°C).
- Keep the driver away from direct sources of heat.
- Do not dismantle driver – there are no user serviceable parts inside.

